

Broken Slate Replacement – Readyslate

*Step 1: Cut the top of the exposed area of the broken slate with an angle grinder or a circular saw (with an appropriate stone disc). Insert a metal sheet underneath in order to protect the underlayment*



*Step 2: Rise the broken piece by placing 2 wooden wedges in both sides (in the adjacent slates). Then cut the membrane by the gap of both sides with a cutter*



NARRABEEN	MONA VALE
SEVEN HILLS	PRESTONS
REGENTS PARK	CARINGBAH
SOMERSBY	PORT MACQUARIE




[sales@no1roofing.com.au](mailto:sales@no1roofing.com.au)  
[www.no1roofing.com.au](http://www.no1roofing.com.au)

*Step 3: Spread the wooden wedges out to make room for the replace piece*



*Step 4: Snap the piece into place without removing the protective film (otherwise you won't be able) and once the membrane is below the edge of the upper row, remove the film.*

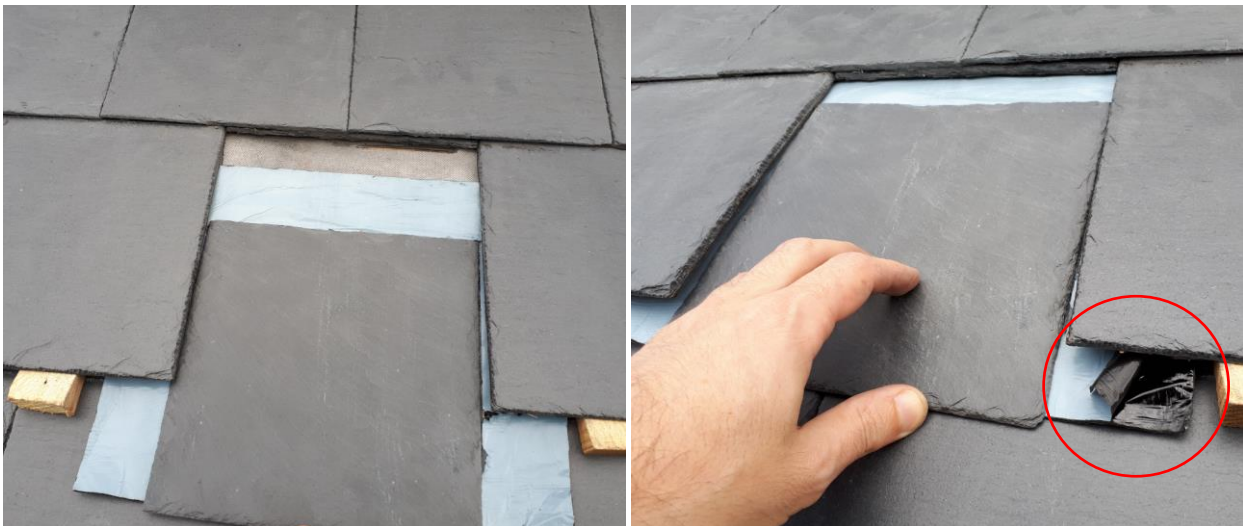

NARRABEEN	MONA VALE
SEVEN HILLS	PRESTONS
REGENTS PARK	CARINGBAH
SOMERSBY	PORT MACQUARIE



sales@no1roofing.com.au  
www.no1roofing.com.au



*Step 5: Remove the protective film and fit the replacement piece. Withdraw the wedges and press the edges*



NARRABEEN	MONA VALE
SEVEN HILLS	PRESTONS
REGENTS PARK	CARINGBAH
SOMERSBY	PORT MACQUARIE



[sales@no1roofing.com.au](mailto:sales@no1roofing.com.au)  
[www.no1roofing.com.au](http://www.no1roofing.com.au)